



Setup Document


Hard Cardboards | Boxes With Hinged Lid | becf-30203

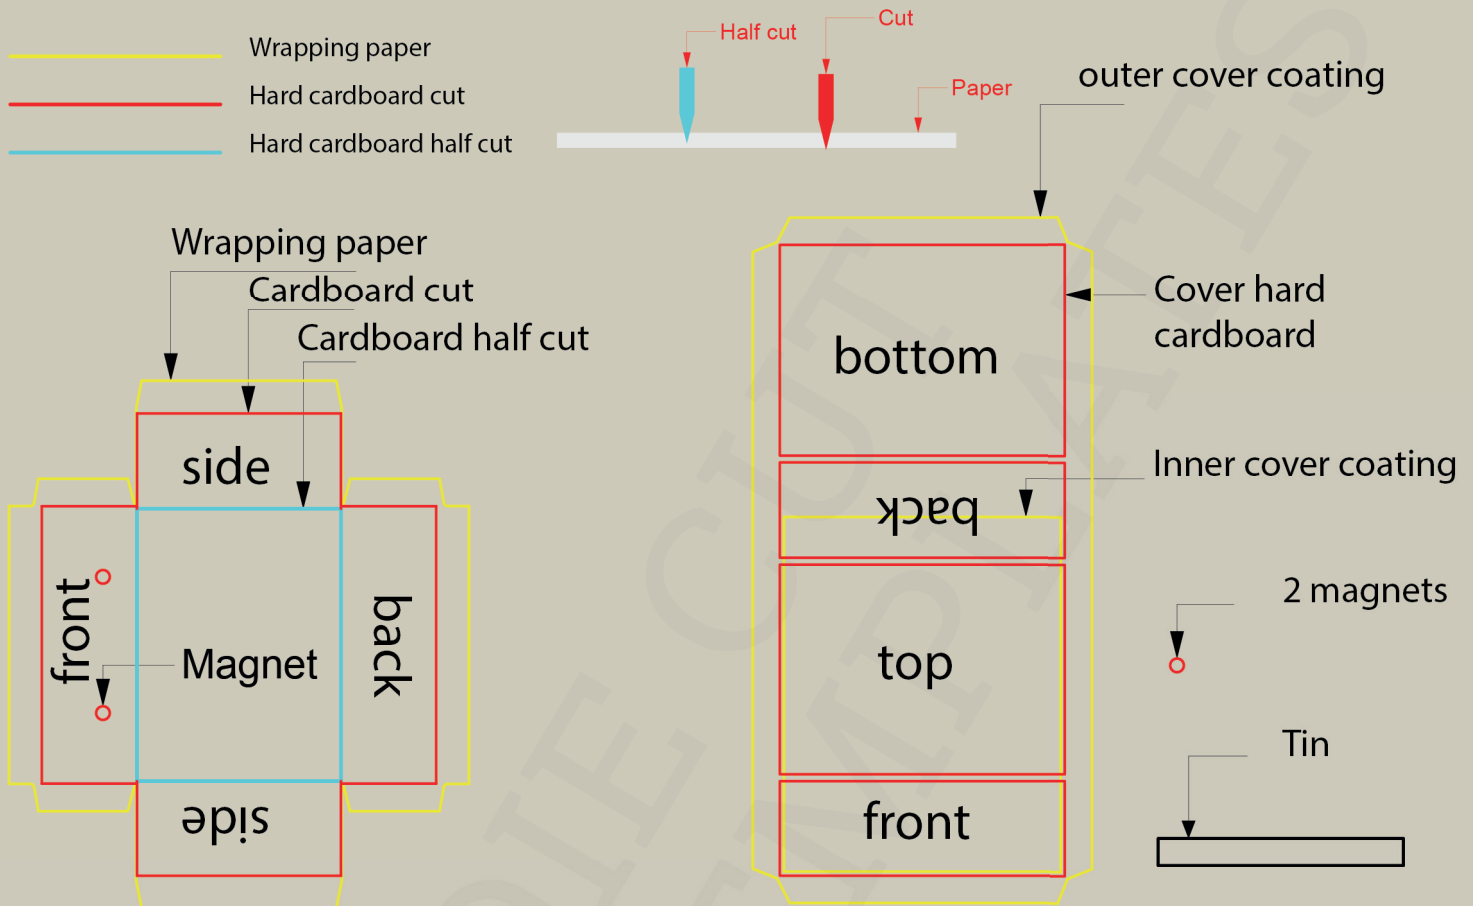


Place the cardboard with the inner side facing outwards.

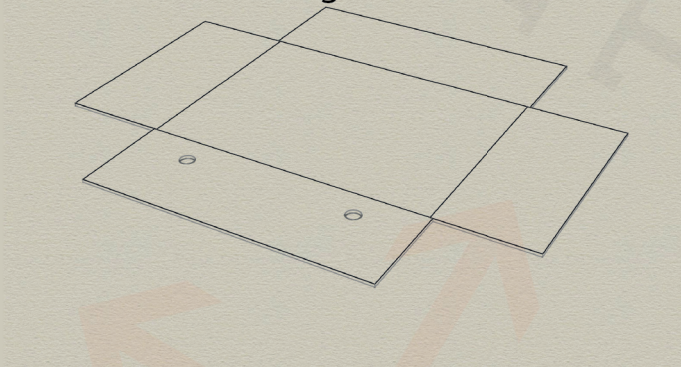

Fold the flaps outwards

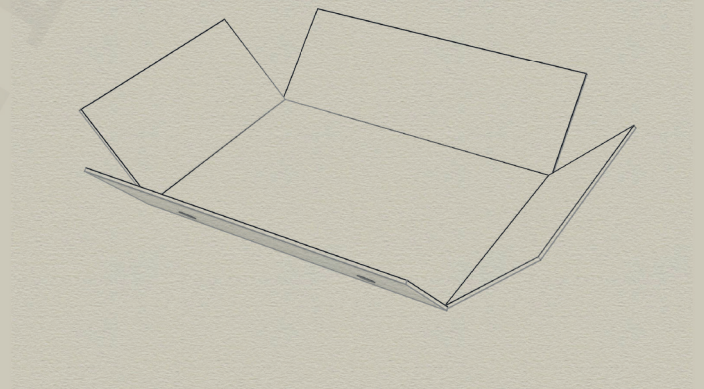


Fold them until the corners meet.

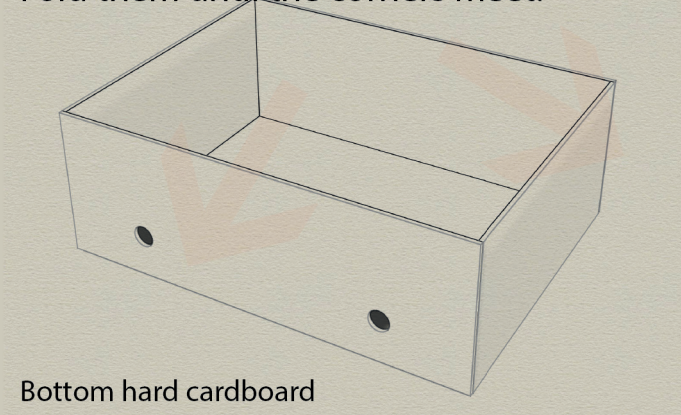


Bottom hard cardboard

Tape the corners.

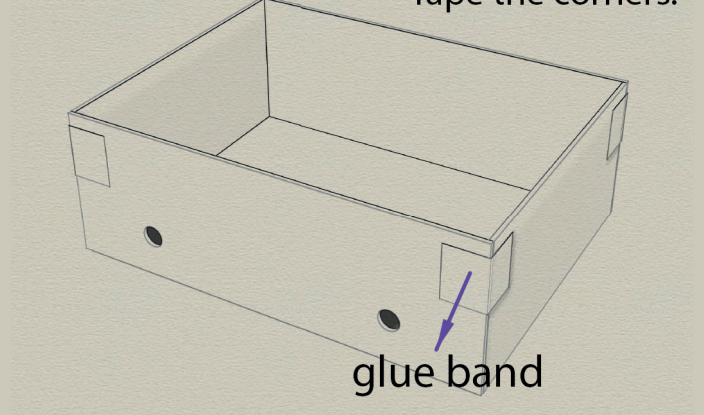


glue band

Glue the wrapping paper.
Make sure side with
the glue is facing outwards.

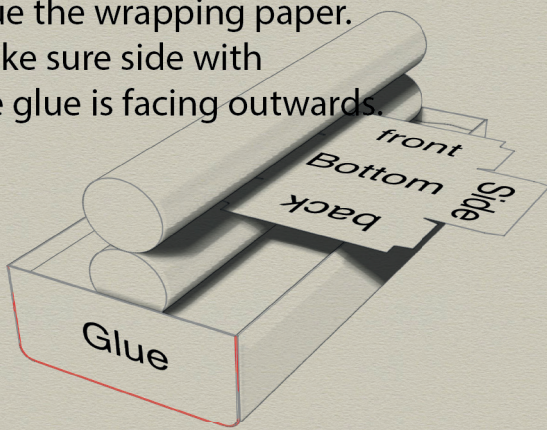


Bottom wrapping paper





Place the cardboard in the centre.

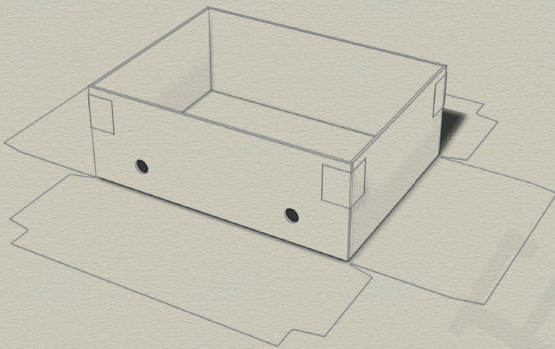


Place the magnets into the holes.

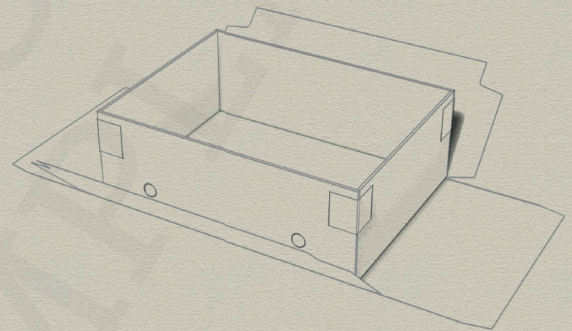


Glue the sides one by one.

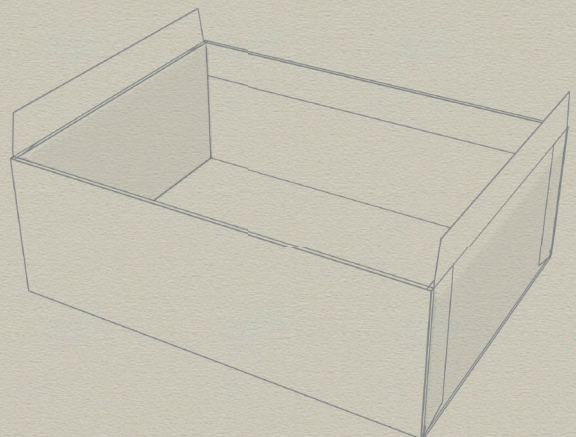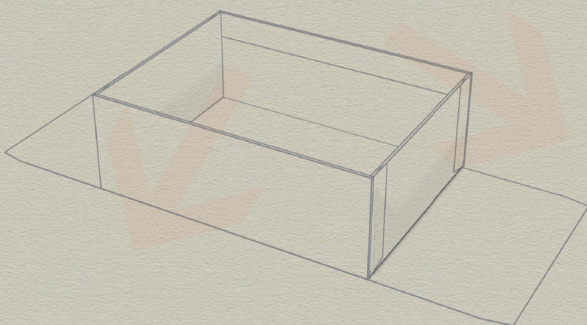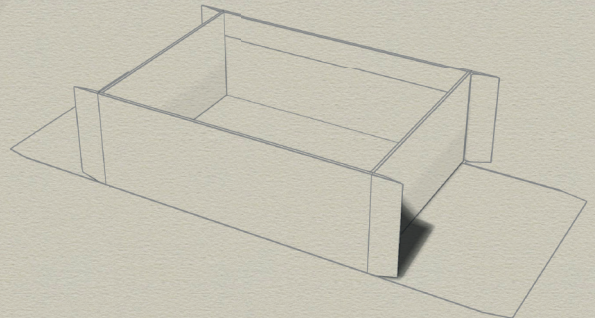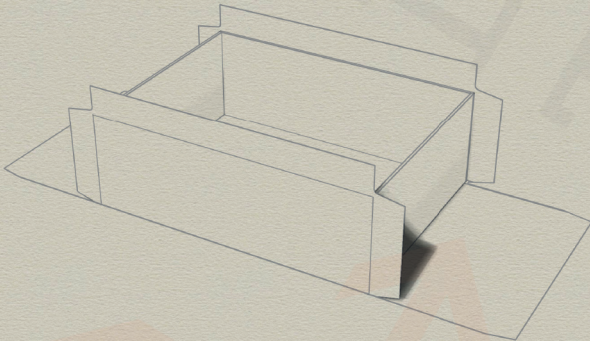


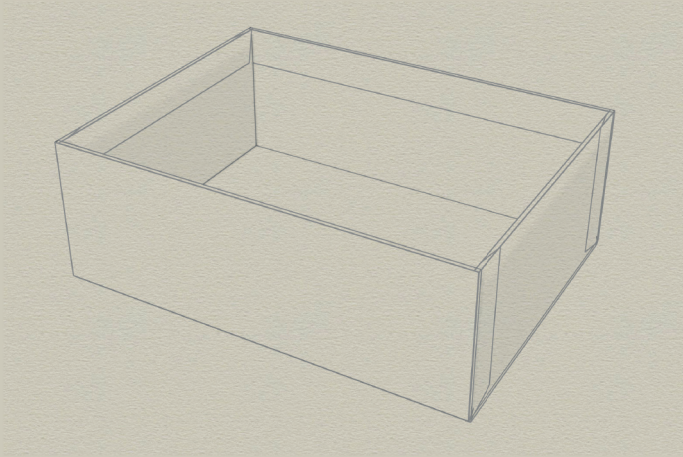


Trace the inner cover coating.

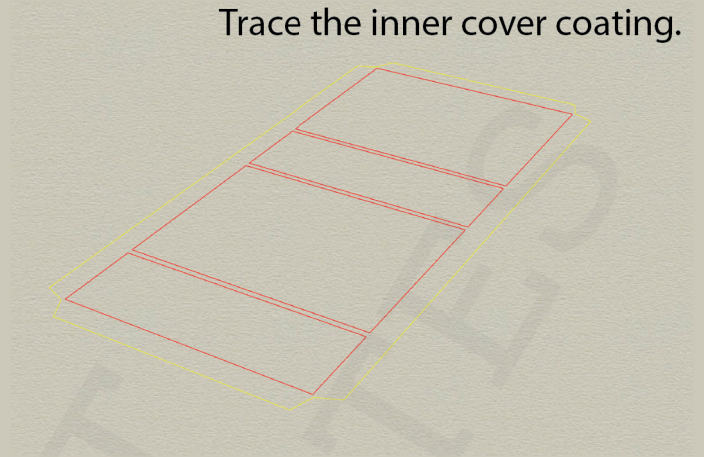


Glue the cover wrapping paper.

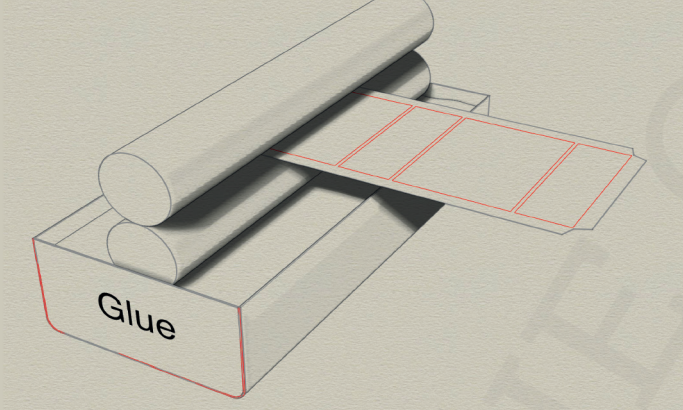


Make sure traced side is facing outwards.

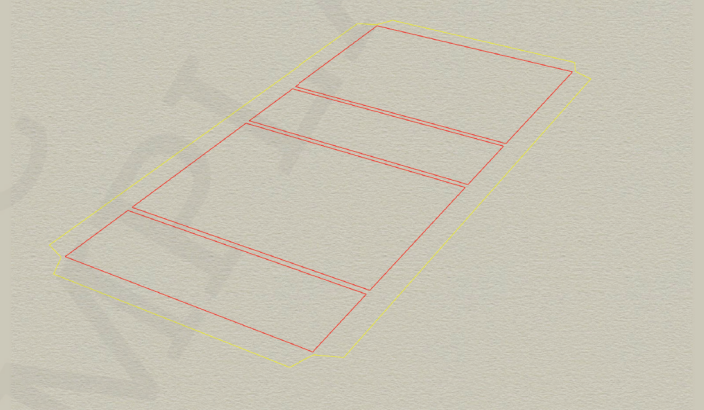


4 pieces of cover cardboard

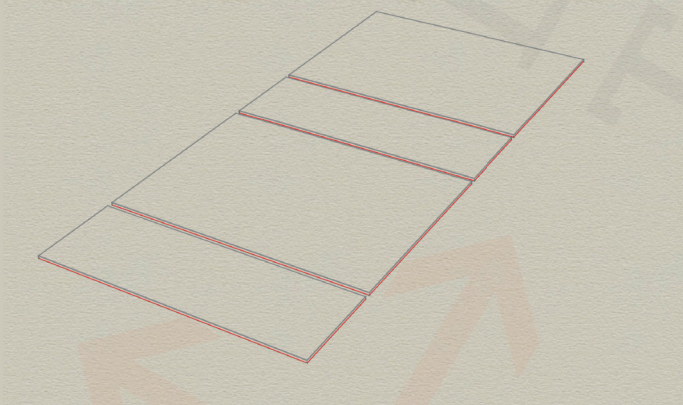


Place the pieces one by one.

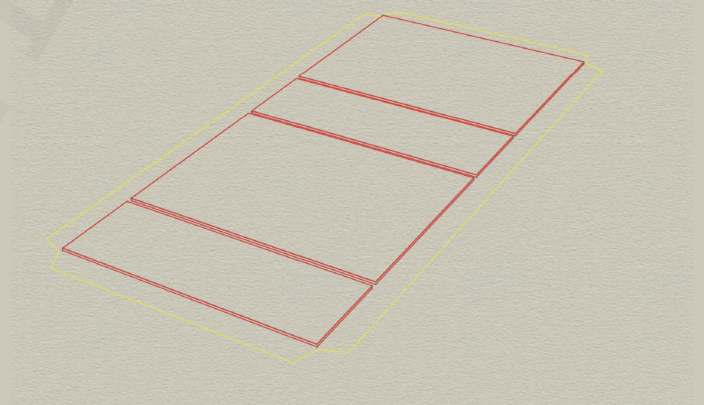


Glue the tin piece that would hold the magnets together.

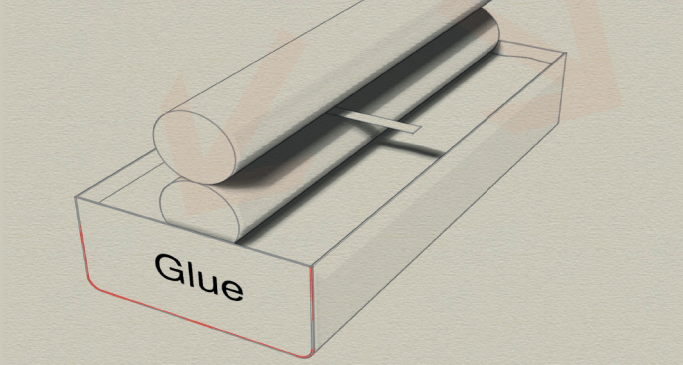


Glue over tin to the cover.

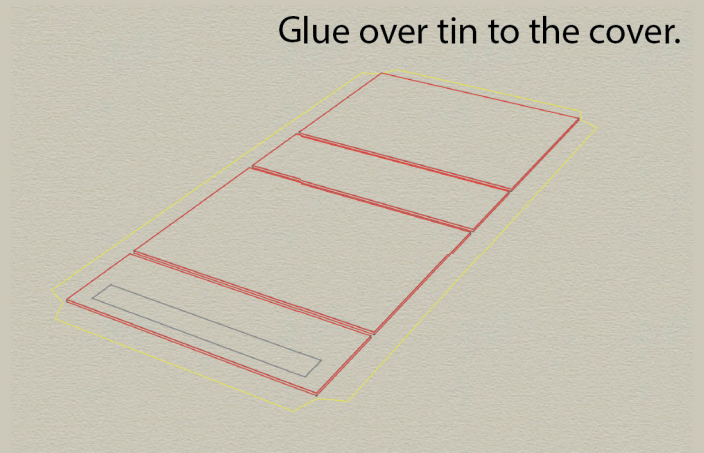


Fold the cover sides.

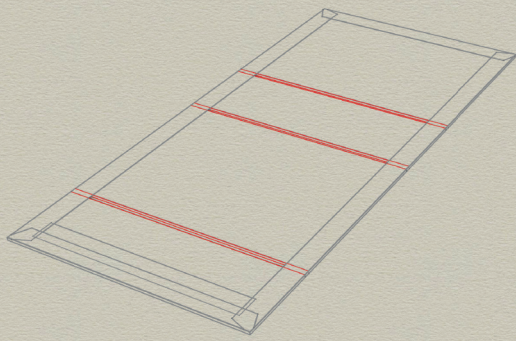


glue the inner cover coating.

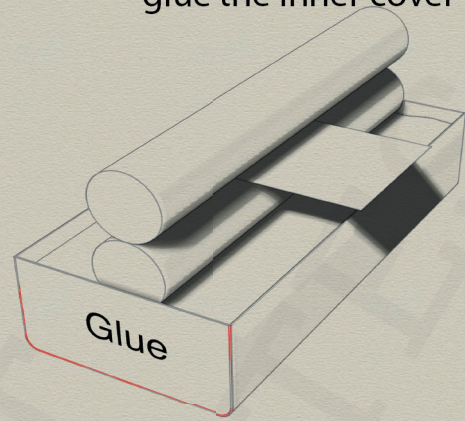


place the inner cover coating to cover.

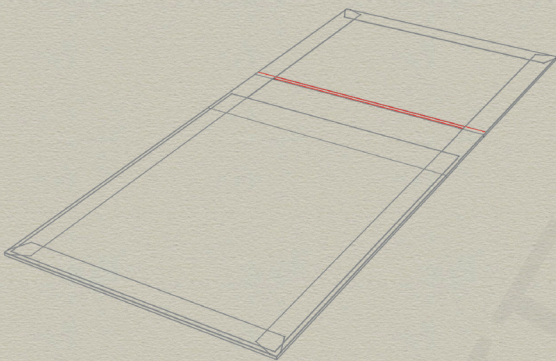


Use hot silicone glue for the magnets.

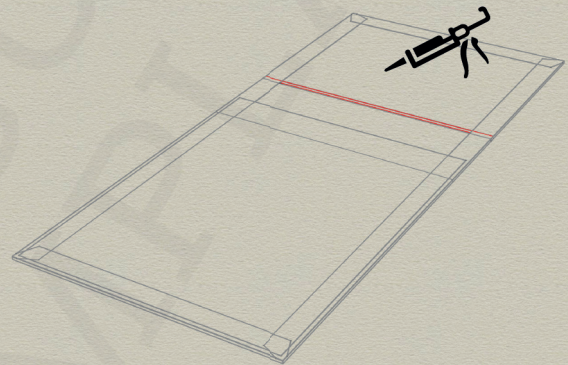

Place the box in the center.
Make sure the magnets are on the front.

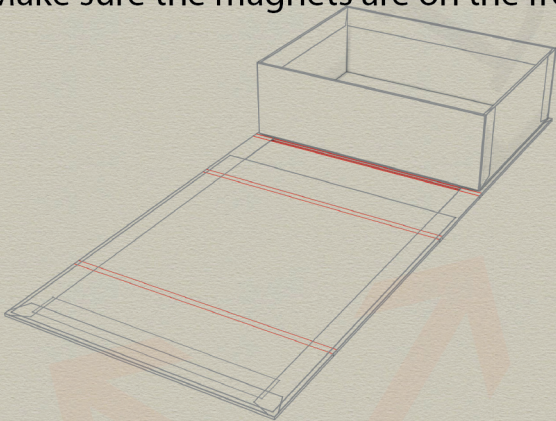

Glue the back side as well.

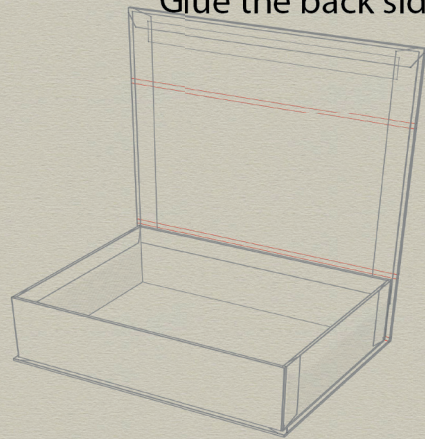

Make sure the tin and
the magnets are aligned.

